INSTALLER FRIENDLY SERIES® - IFS Three Phase Simplex

Three phase, simplex demand dose or timed dose, float or C-Level™ controlled system for pump control and system monitoring.

The IFS simplex control panel is designed to control one 208/240/480/575 VAC three phase pump in water and sewage installations. The panel features an easy-to-use touch pad with display on the inner door for programming and system monitoring. The panel configuration can be easily converted in the field to either a timed dose or demand dose.

The optional C-Level™ sensor is a pressure transducer that senses the liquid level in the tank and sends a signal to the IFS panel. Pump activation levels can be adjusted by using the panel touch pad. C-Level™ sensor operating range is 3-39.9 inches (7.6-101.3 cm).


TOUCH PAD FEATURES


- A. Level Status Indicators illuminate when floats or set points are activated. Alarm will activate if a float operates out of sequence.
- B. HOA (Hand-Off-Automatic) Buttons control pump mode with indication. Hand mode defaults to Automatic when stop level or redundant off level is reached.
- C. Pump Run Indicator illuminates when pump is called to run.
- D. LED Display shows system information including: level in inches or centimeters (C-Level™ only), mode, pump elapsed time (hh:mm), events (cycles), alarm counter, float error count, timed does override counter (timed dose only), and ON/OFF times (timed dose only).
- E. NEXT Push Button toggles display.
- F. UP and SET Push Buttons set pump ON/OFF times (timed dose only) or activation levels (C-Level™ only).

PANEL COMPONENTS

- Enclosure base measures 14 x 12 x 6 inches (35.56 x 30.48 x 15.24 cm). NEMA 4X (ultraviolet stabilized thermoplastic with removable mounting feet for outdoor or indoor use). Note: Options, voltage, and amp range selected may change enclosure size and component layout.
- 2. Red Alarm Beacon provides 360° visual check of alarm condition.
- 3. Exterior Alarm Test/Normal/Silence Switch allows horn and light to be tested and horn to be silenced in an alarm condition. Alarm automatically resets once alarm condition is cleared.
- Alarm Horn provides audio warning of alarm condition (83 to 85 decibel rating).
- Motor Protective Switch provides adjustable overload, branch circuit protection and pump disconnect.
- 6. IEC Motor Contactor controls pump by switching electrical lines.
- Multi-Tap Transformer (208/240/480 VAC primary) provides 120V control alarm voltage.
- 8. Float Connection Terminal Block
- 9. Control Power Indicator/Fuse indicator light illuminates if control power is present in panel. Alarm will activate if control fuse is blown.
- Alarm Power Indicator/Fuse indicator light illuminates if alarm power is present in panel.
- 11. Large Incoming Power Connection Terminal Block
- 12. Terminal Block Float Wiring Label
- 13. Ground Lugs

NOTE: Schematic/Wiring Diagram and Pump Specification Label are located inside the panel on enclosure cover

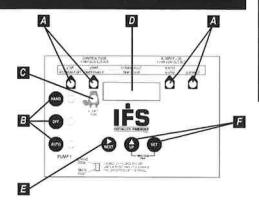

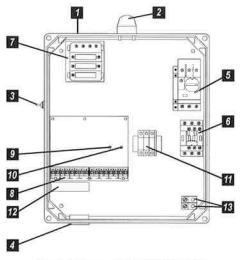

Model Shown IFS51W001X8AC

Reg. Cdn Pat. & TM Off

FEATURES

- Entire control system is UL Listed to meet and/or exceed industry safety standards
- Dual safety certification for the United States and Canada
- Standard package includes three 20' MilliAmpMaster™ control switches
- Complete with step-by-step installation instructions
- Three-year limited warranty

IFS5 1 W	8AC
MODEL IFS5	
ALARM PACKAGE 1 = alarm package (includes test/normal/silence switch, fuse, red light, horn, & float)	
ENCLOSURE RATING	
W = Weatherproof, NEMA 4X (engineered thermoplastic)	
208/230/460 PUMP FULL LOAD AMPS — 575 001 = 1.0-1.6 FLA 005 = 1.0-1.6 FLA	
101 = 1.6-2.5 FLA 201 = 2.5-4.0 FLA 205 = 2.5-4.0 FLA 207 = 4.0.6.3 FLA	
301 = 4.0-6.3 FLA 401 = 6.0-10.0 FLA 511 = 9.0-14.0 FLA 305 = 4.0-6.3 FLA 405 = 6.0-10.0 FLA 515 = 9.0-14.0 FLA	
611 = 13.0-18.0 FLA 621 = 17.0-23.0 FLA 701 = 20.0-25.0 FLA 615 = 13.0-18.0 FLA 625 = 17.0-23.0 FLA 705 = 20.0-25.0 FLA	
701 = 20.0-25.0 FLA 721 = 24.5-30.0 FLA 751 = 29.0-36.0 FLA 755 = 29.0-36.0 FLA	
771 = 33.0-38.0 FLA 811 = 35.0-47.0 FLA 851 = 45.0-60.0 FLA 775 = 33.0-38.0 FLA 815 = 35.0-47.0 FLA 855 = 45.0-60.0 FLA	
911 = 58.0-75.0 FLA 915 = 58.0-75.0 FLA	
FLOAT SWITCH APPLICATION H = pump down (select 17 option) X = no floats C = C-Level™ sensor (must select 24 option)	
(select option 3E and/or 4A & 4D for high water alarm and/or redundant off floats)	
OPTIONS Listed below	
CODE DESCRIPTION	
CODE DESCRIPTION CODE DESCRIPTION	
3A Alarm flasher	(per float)
3A Alarm flasher	(per float) (per float) (per float)
3A Alarm flasher	(per float) (per float) (per float) (ally weighted ▲ (per float) nally weighted ▲ (per float)
3A Alarm flasher 3B Manual alarm reset 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contacts, form C ■ 8AC Display board includes: ETM counter, events (cycles) counter, alarm counter. ■ 10E Lockable latch - NEMA 4X ■ 16A 10' cord in lieu of 20' 16B 30' cord in lieu of 20' 16C 30' cord in lieu of 20' 17C Sensor Float® / interr 17D Sensor Float® / exter	(per float) (per float) (per float) (per float) hally weighted ▲ (per float) hally weighted ▲ (per float) '/ pipe clamp ● (per float) '/ externally weighted ● (per float)
3A Alarm flasher 3B Manual alarm reset 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contacts, form C 8AC Display board includes: ETM counter, events (cycles) counter, alarm counter. 10E Lockable latch - NEMA 4X 10G Lightning arrestor 10K Anti-condensation heater 116A 10' cord in lieu of 20' 16C 30' cord in lieu of 20' 16C 30' cord in lieu of 20' 17C Sensor Float® / interr 17D Sensor Float® / exter 17D SJE MilliAmpMaster' 17H SJE MilliAmpMaster' 24E C-Level™ sensor with	(per float) (per float) (per float) (per float) (ally weighted ▲ (per float) (by per float) (continued by per float)
3A Alarm flasher 3B Manual alarm reset 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contacts, form C 8AC Display board includes: ETM counter, events (cycles) counter, alarm counter. 10E Lockable latch - NEMA 4X 10G Lightning arrestor 10K Anti-condensation heater 11C NEMA 1 remote alarm panel (must select option 6A) 16A 10' cord in lieu of 20' 16C 30' cord in lieu of 20' 16C 30' cord in lieu of 20' 17C Sensor Float® / exter 17C Sensor Float® / pipe 17C Senso	(per float) (per float) (per float) (per float) hally weighted ▲ (per float) hally weighted ▲ (per float) '/ pipe clamp ● (per float) '/ externally weighted ● (per float) clamp ▲ (per float) 4' vent tube and 20' cord 4' vent tube and 20' cord 8' vent tube and 20' cord
3A Alarm flasher 3B Manual alarm reset 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contacts, form C ■ 8AC Display board includes: ETM counter, events (cycles) counter, alarm counter. ■ 10E Lockable latch - NEMA 4X ■ 10G Lightning arrestor ■ 11C NEMA 1 remote alarm panel ■ 16A 10' cord in lieu of 20' ■ 16C 30' cord in lieu of 20' ■ 16C 30' cord in lieu of 20' ■ 17C Sensor Float® / interm ■ 17D Sensor Float® / exter ■ 17D Sensor Float® / exter ■ 17H SJE MilliAmpMaster' ■ 17J Sensor Float® / pipe 1 ■ 24E C-Level™ sensor with ■ 11C NEMA 1 remote alarm panel	(per float) (per float) (per float) (per float) hally weighted ▲ (per float) hally weighted ▲ (per float) '/ pipe clamp ● (per float) '/ externally weighted ● (per float) clamp ▲ (per float) 4' vent tube and 20' cord 4' vent tube and 40' cord 8' vent tube and 40' cord
3A Alarm flasher 3B Manual alarm reset 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contacts, form C 8AC Display board includes: ETM counter, events (cycles) counter, alarm counter. 10E Lockable latch - NEMA 4X 10G Lightning arrestor 10K Anti-condensation heater 11C NEMA 1 remote alarm panel (must select option 6A) 11D NEMA 4X remote alarm panel (must select option 6A) 116A 10' cord in lieu of 20' 16C 30' cord in lieu of 20' 17C Sensor Float® / 20' 17D Sensor Float® / interr SJE MilliAmpMaster' 17D Sensor Float® / exter 17D Sensor Float® / pipe 17D Sensor Float® / exter 1	(per float) (per float) (per float) (per float) nally weighted ▲ (per float) nally weighted ▲ (per float) '/ pipe clamp ● (per float) '/ externally weighted ● (per float) clamp ▲ (per float) 4' vent tube and 20' cord 4' vent tube and 40' cord 8' vent tube and 40' cord 8' vent tube and 40' cord ctivated ▲ Mercury-activated
3A Alarm flasher 3B Manual alarm reset 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contacts, form C ■ 8AC Display board includes: ETM counter, events (cycles) counter, alarm counter. ■ 10E Lockable latch - NEMA 4X ■ 10G Lightning arrestor ■ 11C NEMA 1 remote alarm panel (must select option 6A) ■ 11D NEMA 4X remote alarm panel (must select option 6A) ■ Mechanically-a	(per float) (per float) (per float) (per float) nally weighted ▲ (per float) nally weighted ▲ (per float) '/ pipe clamp ● (per float) '/ externally weighted ● (per float) clamp ▲ (per float) 4' vent tube and 20' cord 4' vent tube and 40' cord 8' vent tube and 40' cord 8' vent tube and 40' cord ctivated ▲ Mercury-activated
3A Alarm flasher 3B Manual alarm reset 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contacts, form C 8AC Display board includes: ETM counter, events (cycles) counter, alarm counter. 10E Lockable latch - NEMA 4X 10G Lightning arrestor 10K Anti-condensation heater 11C NEMA 1 remote alarm panel (must select option 6A) 11D NEMA 4X remote alarm panel (must select option 6A) 11A 10' cord in lieu of 20' 16C 30' cord in lieu of 20' 17C Sensor Float® / interr 17D Sensor Float® / interr 17D Sensor Float® / exter 17D Sensor Float® / exter 17D Sensor Float® / pipe 1 17D Sensor Float® / exter 1 17D Sensor Floa	(per float) (per float) (per float) (per float) nally weighted ▲ (per float) nally weighted ▲ (per float) '/ pipe clamp ● (per float) '/ externally weighted ● (per float) clamp ▲ (per float) 4' vent tube and 20' cord 4' vent tube and 40' cord 8' vent tube and 20' cord 8' vent tube and 40' cord ctivated ▲ Mercury-activated
3A Alarm flasher 3B Manual alarm reset 3D Cord in lieu of 20' 3C Sensor Float® / interreset / inter	(per float) (per float) (per float) (per float) nally weighted ▲ (per float) nally weighted ▲ (per float) '/ pipe clamp ● (per float) '/ externally weighted ● (per float) clamp ▲ (per float) 4' vent tube and 20' cord 4' vent tube and 40' cord 8' vent tube and 40' cord 8' vent tube and 40' cord ctivated ▲ Mercury-activated